

# Rink A and B Sound system Operating Instructions

- Rink A system is operated from booth next to zamboni doors
- Rink B system is in the time keeper/score keeper box

For both systems:

- Turn on CD Player and Mixer, Insert CD
- Make sure Channel 1/CD Player toggle is on **LINE 1**
- Set Channel 1 volume to 7-8
- Control volume of music through **Master Volume** control (Caution – going too high can cause feedback and distortion)
- There is a volume control for Rink B's system only in locker room 9. If you are doing everything right on Rink B and still do not hear music, get with a rink employee to adjust the volume control for Rink B. Rink A does not have this.

## Helpful Hints

- Music must stop when puck is in play. Lowering master volume is best way to stop music
- There is no speaker in the booth, so you cannot cue up music unless you bring a set of headphones. Headphones will need the adaptor (large plug in) to fit into system. Walkman headphones won't work without adaptor.
- There is no microphone, in the booth, unless you bring one, you can't announce rosters, goals, or penalties.
- Adjust base and treble to your liking. Too much base makes music hard to hear
- **DO NOT PLAY MUSIC AT FULL VOLUME, THE MUSIC WON'T BE ABLE TO BE HEARD AND YOU'LL BLOW THE SPEAKERS.**
- Rink B's equipment is less reliable than Rink A's. Rink B's equipment does work, but not every song on the CD's plays on Rink B. Have patience. There are enough songs on the play list to make the game special.