

# Rink 1 Time Clock Instructions

## **This clock uses leading zeros to make 2 digits numbers**

ie: player #9 receives a penalty, enter 09 for the player #

ie: Penalty time is 1:30, enter 0130 for the time

Turn on the Time Clock using the switch on the right side of the clock  
The Time Clock will prompt "Do you want to continue where you left off?" Press NO.

Enter Code 871 - Hockey? Press YES.

The Time Clock will prompt "Do you want to use Penalty Time Out?"  
Press NO.

### **To Set the Time and Period:**

Press SET and then TIME:

Warm-up 0300 (3 minutes) or 0500 (5 minutes) then press YES

Period 1500 then press YES

If you make a mistake press NO and it will clear the time

A prompt will appear for the period # select 1, 2, or 3

Repeat for each period

Press START when the puck drops and press STOP when the whistle blows. You may also use the attached controller.

### **To Adjust the Score:**

Press HOME or GUEST SCORE. A + sign will appear, enter 1 for each goal

If you need to adjust the score, press SET, HOME/GUEST SCORE and enter the correct number of goals scored.

### **For Shots on Goal:**

Press HOME or GUEST SHOTS. A + sign will appear, enter 1 for each shot.

### **For Penalties:**

Press SET and then HOME or GUEST PENALTY.

Enter the time 0130 or 0200 and press YES.

Enter the Player's # as a 2 digit number, the penalty will appear on the clock.

To Clear a penalty, press HOME or GUEST PENALTY, then PENALTY CLEAR, enter YES.